

# WALL MOUNTING KIT INSTRUCTIONS

When fitting the brackets to the wall determine the Clearance Height required & from the table below calculate the height to the top of the upper bracket.

Machine Size                      Height to the top of the upper bracket

ULTIMAT 1000                      Clearance Height + 110 cms.

ULTIMAT 1200                      Clearance Height + 131 cms.

ULTIMAT 1500                      Clearance Height + 167 cms.

Mark the position of the holes on the wall using the bracket as a template. Drill the four holes (6mm Dia), insert the plugs and screw the bracket firmly in place.

NOTE- IF THE WALL IS NOT MADE OF STRONG BLOCK OR BRICK AN ALTERNATIVE FIXING METHOD MAY BE REQUIRED.

Attach the top end of the Ultimatt to the bracket and let it hang against the wall, this will enable the Lower Bracket to be aligned with the Ultimatt. Fix the Lower Bracket to the wall.

Check that all is secure and the Ultimatt hinges back towards the wall without any difficulty.

1

Screw the Bracket to the wall using the four screws and rawplugs provided


3

Pass the M6 Cap Head Screw through the steel washer, bracket and plastic washer into the threaded hole. Tighten firmly.

2

Remove the grub screw and ensure the one above is tight. (Repeat on the other side.)

## FIXING TO THE TOP BRACKET

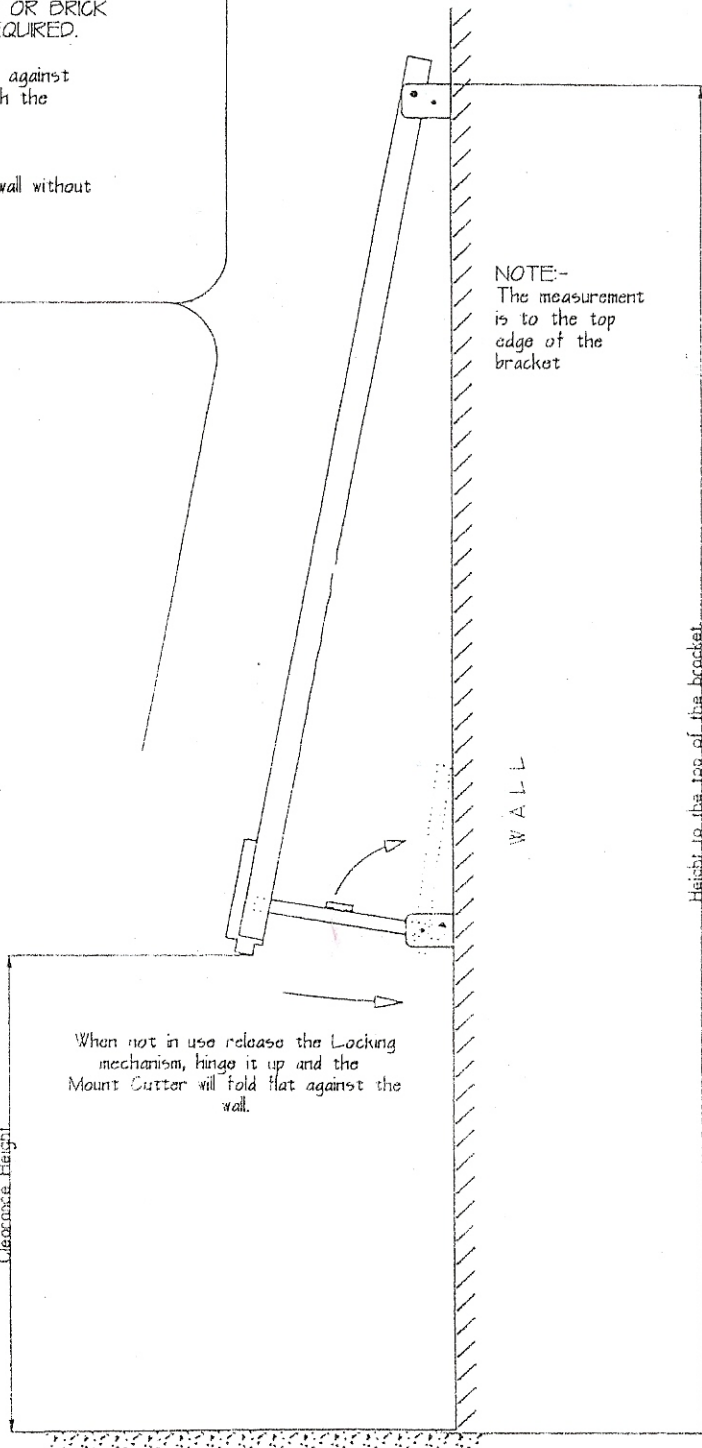


NOTE- The measurement is to the top edge of the bracket

When not in use release the Locking mechanism, hinge it up and the Mount Cutter will fold flat against the wall.


Clearance Height

Height to the top of the bracket


WALL

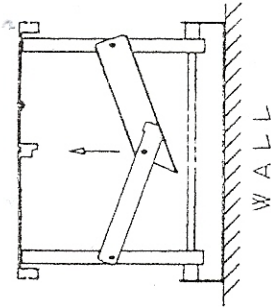

Pull the Locking Mechanism towards the Mount Cutter to lock it in position.



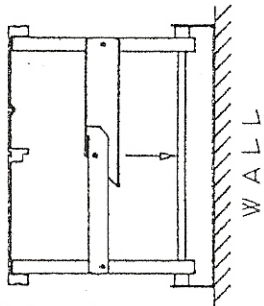


Push the Locking Mechanism towards the wall to release its grip on the Mount Cutter Base Board.

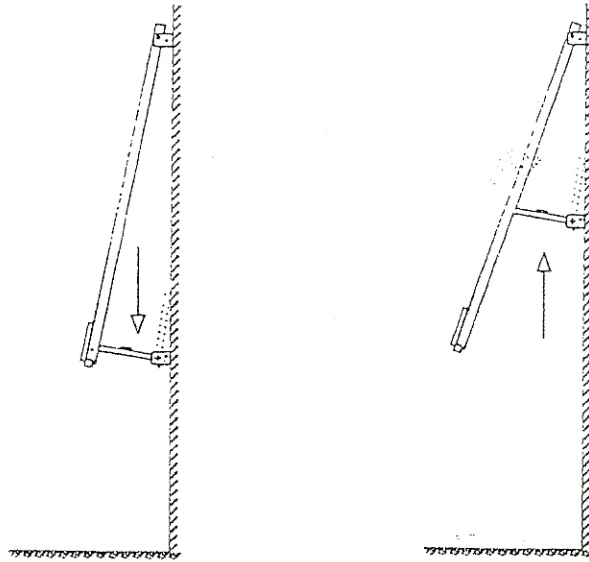

Locate the lower bracket to suit your working position.

LOCKING THE ULTIMAT IN THE OPERATING POSITION.

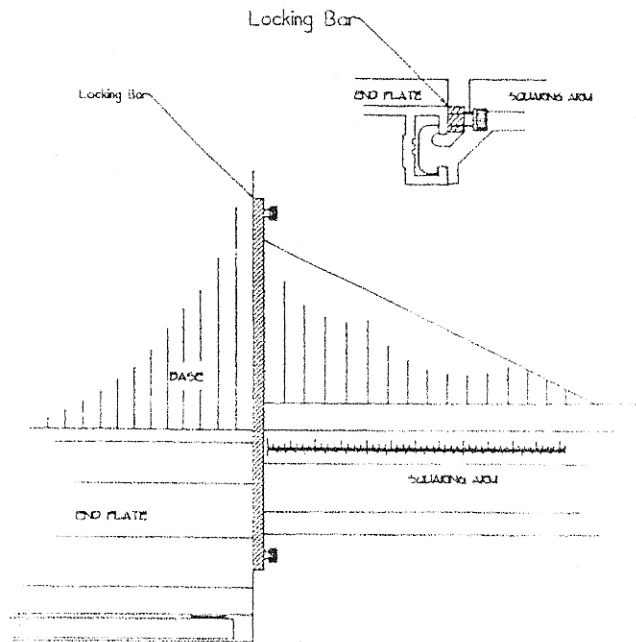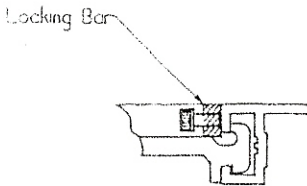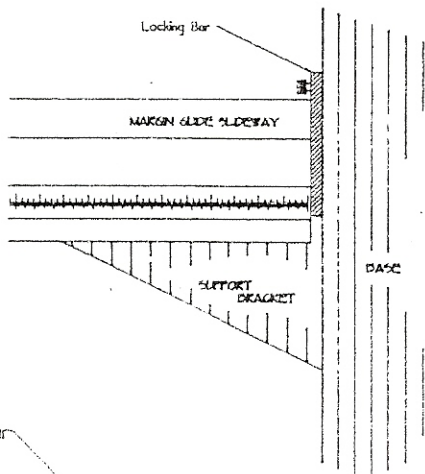

When the Ultimat is fixed to the wall you will find the Squaring Arm and Margin Guide need to be locked in place. Position the Locking Bar as shown above. There are two spare Locking Bars which fix two Mountboard Support Arms in place if used.